


How to measure for your new blinds

Recess Fitting

This is the measurement you need to take if you want to fit your blind inside the window recess. Measure the full width and height of the recess and we will make the appropriate deductions to ensure a perfect fit.

Top Tips

- Measure the recess in 3 places for both the width and drop and use the smallest measurements.
- Don't make any deductions - we will do that to ensure your blind fits perfectly.
- Use a metal tape measure - cloth tape measures can stretch and give inaccurate measurements.

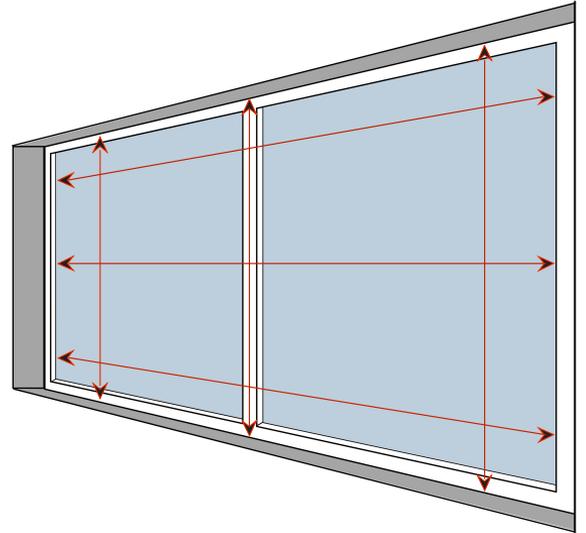

Exact Fitting (Outside Recess)

This is the measurement you need to take if you want the blind to hang outside of the window recess. In this case we will make the blind to your specified size with no deductions.

Top Tip

- Measure the exact width of the area you would like the blind to cover. To minimise light leakage we recommend that the blind overlaps the window recess by at least 70mm at the top and 50mm each side.

